



CAUTION: Please check for pipework and cables before drilling the wall.

X Alert Installation

1. Place the X Alert against the wall you want to mount the unit on and mark the top mounting hole.


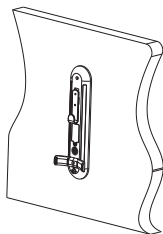


Wall Plug provided

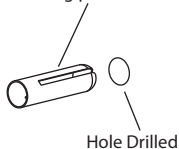

2. Using a 5.5mm drill bit, drill the mark you made and insert one of the brown wall plugs.

3. Now using the screws provided screw the X Alert to the wall through the top mounting hole. Tighten so the unit can just about be moved from the bottom side to side.

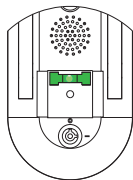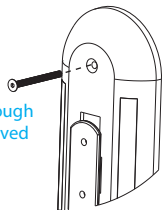

4. Using the built in spirit level pivot the unit until the bubble is in the center of the spirit level. Now mark the wall through the bottom hole of the X Alert and repeat step 2.

5. Now you have the wall plug in place you can put the Extinguisher steady (B) onto the front of the unit and screw the unit to the wall through the bottom mounting hole.

